

Sesamee – Instruction Sheet

7500

TO SET OR CHANGE YOUR COMBINATION:

This travel lock product is preset at the factory to open at 0-0-0. To reset the factory combination to your own combination follow these steps:

Step #1: Set the dials to 0-0-0

Step #2: Using a tool of choice (example: ball point pen) press and hold the reset button on the bottom of the lock all the way down. Rotate dials to your desired new combination. Be sure to record your combination and store in safe location.

Step #3: To test, rotate dials to an incorrect combination. Cable should remain locked and release button cannot be pressed in. Turn dials to the new combination and press releasebutton, cable should unlock.

To reset combination turn dials to existing combination, then repeat steps 2 and 3.

